

DESCRIPTION EnCap-LEX is an encapsulated enzyme breaker used in hydraulic fracturing applications. EnCap-LEX is similar to EnCap-LE except the release is slower. Longer delays can be obtained with EnCap-LEX. EnCap-LEX can be used to replace EnCap-LE.

- ADVANTAGES**
- Increase break times can be obtained
 - Higher concentrations can be used without compromising fluid viscosity during proppant placement.
 - Solid breaker which will concentrate in the proppant pack during fluid leak-off.
 - Increase conductivity of the created fracture by:
 - clean-up of proppant pack
 - breaking of filter cakes from linear or borate crosslinked fluids.

- APPLICATION**
- EnCap-LEX can be directly substituted into fluids using EnCap-LE or Hemicellulase enzyme breakers to reduce viscosity.
 - EnCap-LEX can be used in high pH or low pH systems (greater than pH of 8.5, below 140°F) when an encapsulated acid, such as EnCap-A or EnCap-SBS, are also added.
 - Break guar or HPG based fluids that are below pH 8.5 or 140°F. If a delayed release acid is also added, high pH or borate crosslinked fluid can be broken.
 - Breaker concentrations can be increased without effecting proppant transport capabilities of the fluid.
 - Breaker will concentrate in the fracture and break filter cakes from low pH linear or foamed fluids or high pH or borate crosslinked fluids if an encapsulated acid is also added.

The information contained herein is based on data considered accurate with representative samples. However, no warranty is expressed or implied regarding the accuracy of this data or the results to be obtained from the use thereof. The above data does not imply specifications for this product. Fritz Industries, Inc. assumes no responsibility for personal injury or property damage to vendees, users or third parties, caused by the material. Such vendees or users assume all risks associated with the use of the material. Consult the Material Safety Data Sheet before using this product.

PROPERTIES

- Blue Granules
- Faint Organic Odor
- Partially soluble in water
- Specific gravity – 1.30
- Bulk density – 35 to 43 lb./ft.³
- Particle size – 10/50 mesh
- Enzyme activity versus:
 - pH see FIGURE 1
 - Temperature see FIGURE 2
- Viscosity Profiles at Room Temperature see FIGURE 3

The information contained herein is based on data considered accurate with representative samples. However, no warranty is expressed or implied regarding the accuracy of this data or the results to be obtained from the use thereof. The above data does not imply specifications for this product. Fritz Industries, Inc. assumes no responsibility for personal injury or property damage to vendees, users or third parties, caused by the material. Such vendees or users assume all risks associated with the use of the material. Consult the Material Safety Data Sheet before using this product.

FIGURE 1

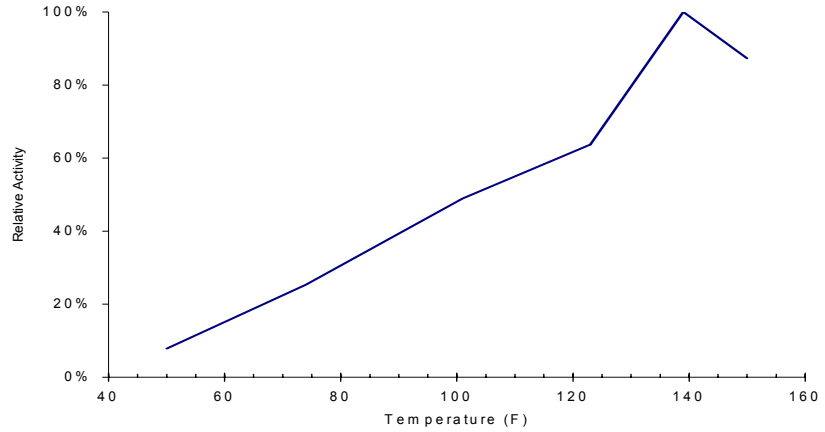


FIGURE 2


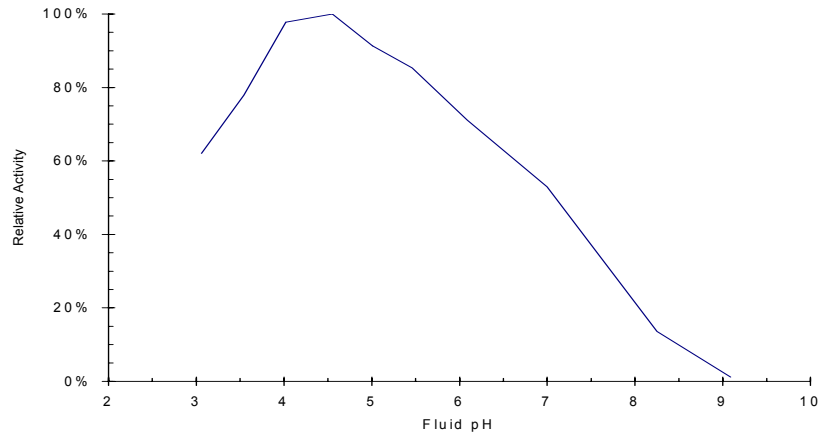


FIGURE 3

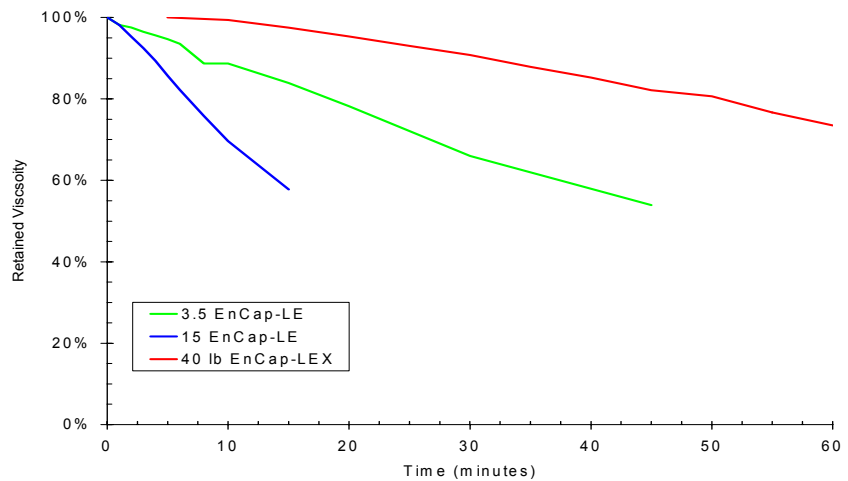

The information contained herein is based on data considered accurate with representative samples. However, no warranty is expressed or implied regarding the accuracy of this data or the results to be obtained from the use thereof. The above data does not imply specifications for this product. Fritz Industries, Inc. assumes no responsibility for personal injury or property damage to vendees, users or third parties, caused by the material. Such vendees or users assume all risks associated with the use of the material. Consult the Material Safety Data Sheet before using this product.